


2014 BUSINESS CARD HOLDERS

Created by Sherry Titzer

<http://www.atimetostitch.com>

This new style business card holder has turned fabric edges instead of satin stitched edges so it's more durable! Detailed fabric/supplies/cutting instructions provided with orders. (For 5x7 or larger hoops)

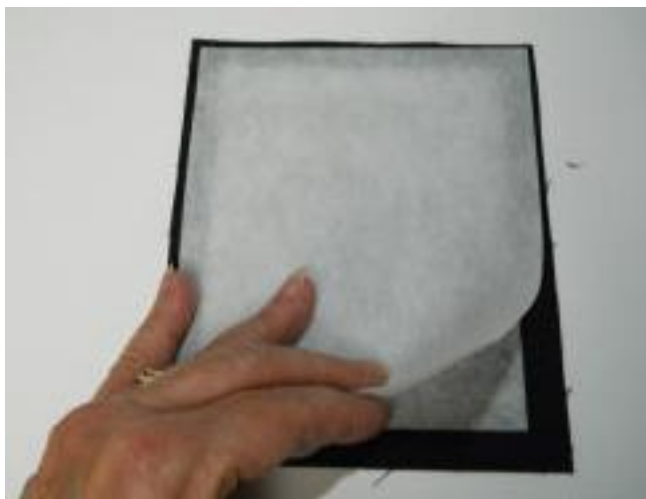

1. **Outer case fabric** – on wrong side, iron small piece of fusible fleece centered. Next, iron slightly larger piece of fusible interfacing centered over the fleece.



2. Flip outer case fabric to right side. Mark center on the edge at the top and bottom. (center is 2 5/8")



3. **Lining** – On wrong side, fuse a 4" strip of 5/8" wide Heat 'n Bond fusible tape to one 5 1/4" edge. Do not remove paper backing.



4. **Inside pockets** – On wrong side, add a 4 1/2" strip of 5/8" wide fusible tape to 5 1/4" edge on both pieces.



5. On inside pockets, fold fabric at inside edge of tape & iron to crease. Remove paper backing, iron to fuse.



6. Stitch placement lines directly on the stabilizer first. Spray area with temporary adhesive spray.



7. Remove hoop, center fabric even with top placement line & center marks on fabric even with vertical placement line. Tape corners, put hoop on machine. Continue stitching design following instructions in text file.



8. When instructed, center pockets wrong side up in hoop even with edges and ends of fabric in hoop. (folded pocket edges to center) Tape corners.



9. Next, center lining wrong side up over fabric in hoop even with top/sides (fusible tape at bottom). Lining is shorter at bottom on purpose! Tape corners, put hoop on machine. Last step stitches everything together!



10. Remove from hoop. Trim corners for turning and then trim the sides leaving 1/4" seam allowances. Do not remove the stabilizer.



Remove paper backing from fusible tape, turn right side through lining opening. Maneuver until edges are even & lining is flat. Iron to set & fuse opening in lining. Top stitch edge of case with scant 1/4" seam. You're finished!